
LRP Installation Instructions




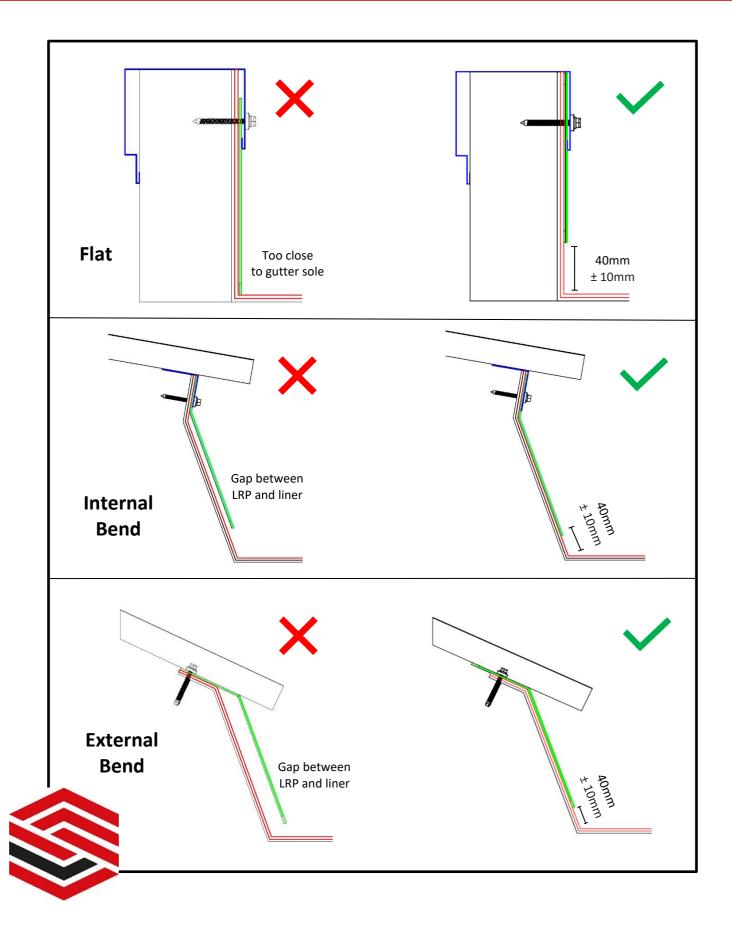

Flat


Fit the liner as per specification ensuring that the crease lines are pushed firmly into the original profile of the gutter.


Fix any flashings as required, ensuring that they overlap by 150mm.

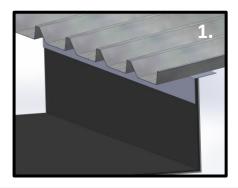

Push the LRP's up behind the flashings.

Twin fix the LRP at the highest point possible through the flashing.

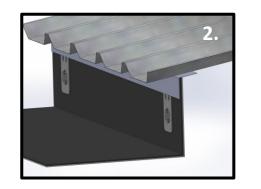


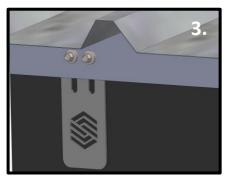


Internal Bend

Fit the liner as per specification ensuring that the crease lines are pushed firmly into the original profile of the gutter.


Fix any flashings as required, ensuring that they overlap by 150mm.

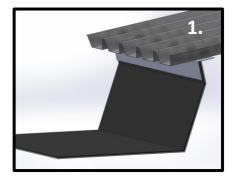

Push the LRP's up behind the flashings. Ensure the bend in the LRP sits flush with the gutter profile. (LRP's can be fit in front of flashing if specified).

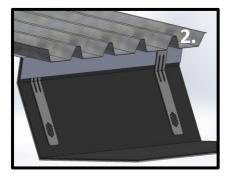

Twin fix the LRP at the highest point possible through the flashing. (LRP's can be fit in front of flashing if specified).

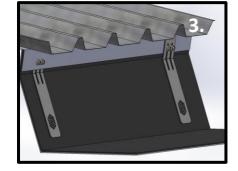


External Bend


Push the LRP's up underneath the

roof sheets. Ensure the bend in

the LRP sits flush with the gutter profile.

Fit the liner as per specification ensuring that the crease lines are pushed firmly into the original profile of the gutter.

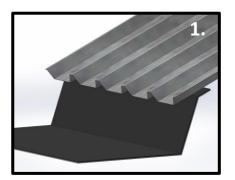

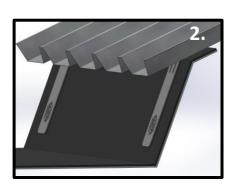

When LRP's are pushed up underneath the roofsheet, single fix the LRP at the highest point possible.

