



ROOFLOCK TAPE

HIGH PERFORMANCE WATERPROOFING TAPE

APPLICATION INSTRUCTIONS

(page 1)

ROOFLOCK TAPE SURFACE CLEANER

Clean the surface thoroughly and allow it to dry completely. Recommended cleaners: Rooflock Tape Surface Cleaner, Lacquer Thinner, Acetone. If using on TPO or aged PVC, lightly abrade the surface with sandpaper and wipe off the dust.

ROOFLOCK TAPE

- Start removal of release liner (see Helpful Tips below).
- Apply tape to the surface. Try to avoid creating air bubbles.
- Apply firm pressure to the Rooflock Tape to activate the bonding process. Use a steel roller for best results. The firmer the pressure applied, the better and faster the bond.

When applying Rooflock Tape to porous surfaces, such as concrete, masonry or timber, use Rooflock Tape Primer. Do not use Rooflock Tape Primer on PVC roofs. When using Rooflock Tape in temperatures below 5°C use Rooflock Tape Primer and store the tape at room temperature prior to use.

HELPFUL TIPS

HOW DO I REMOVE THE RELEASE LINER?



Grip the outer tape edges with the thumb and forefingers



Push fingers together, bunching the tape together in the middle



In a fast motion, snap the tape forward and backwards 7 - 10 times



Push fingers back together allowing the release liner to come away from the tape backing



Peel the release liner and apply the tape to the prepared surface

PLEASE TURN OVER

ADDRESS

Catford Road,
Roundthorn Industrial Estate,
Manchester, M23 9LR.

ONLINE

www.rooflock.com
sales@rooflock.com

PHONE

0161 956 2400



sharmans

gutter & roof refurbishment systems

RoofLock

ROOFLOCK TAPE

HIGH PERFORMANCE WATERPROOFING TAPE



APPLICATION INSTRUCTIONS (cont.)

(page 2)

CAN I APPLY ROOFLOCK TAPE IN COLD WEATHER?

Absolutely. When applying Rooflock Tape in temperatures below 5°C, it is important to keep the tape warm at room temperature prior to use.

1. Remove any ice or snow that may be present and make sure that the surface is dry.
2. Treat area with Rooflock Tape Primer (Do not use Rooflock Tape Primer on PVC roofs)
3. Allow Rooflock Tape Primer to dry (approx 30 minutes)
4. Apply the Rooflock Tape

WHAT SHALL I DO IF THERE IS AN AIR BUBBLE IN THE TAPE AFTER I HAVE APPLIED IT?

Rooflock Tape works best if contact to the roof surface is 100%. When variations in the roof surface create an air bubble larger than 10mm, or within 20mm of the edge of the tape, we recommend:

AIR BUBBLE

Pierce the bubble and squeeze the air out. The Rooflock adhesive backing will reseal the cut




LARGE CREASES

Cut the creased area so the tape can be rolled flat. A smaller strip of Rooflock Tape should then be used to seal the cut area




OPENINGS ALONG A 90° INTERNAL EDGE

Cut the tape so it can be rolled flat into the edge, then apply a smaller strip of Rooflock Tape to seal the cut area. Use a penny roller to roll the tape right into the corner

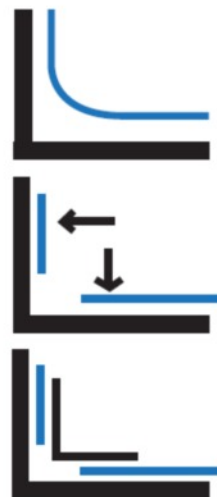

HOW DO I JOIN THE EDGES OF ROOFLOCK TAPE TOGETHER?

You can butt joint the tape or overlap it by 10mm. If you choose to butt joint it, make sure the edges are pinched together. If you overlap the tape, ensure the tape is firmly rolled to achieve the best possible bond

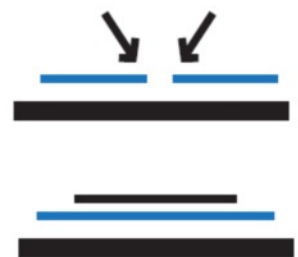

ADDRESS

Catford Road,
Roundthorn Industrial Estate,
Manchester, M23 9LR.

ONLINE

www.rooflock.com
sales@rooflock.com

PHONE

0161 956 2400



sharmans
gutter & roof refurbishment systems

RoofLock